



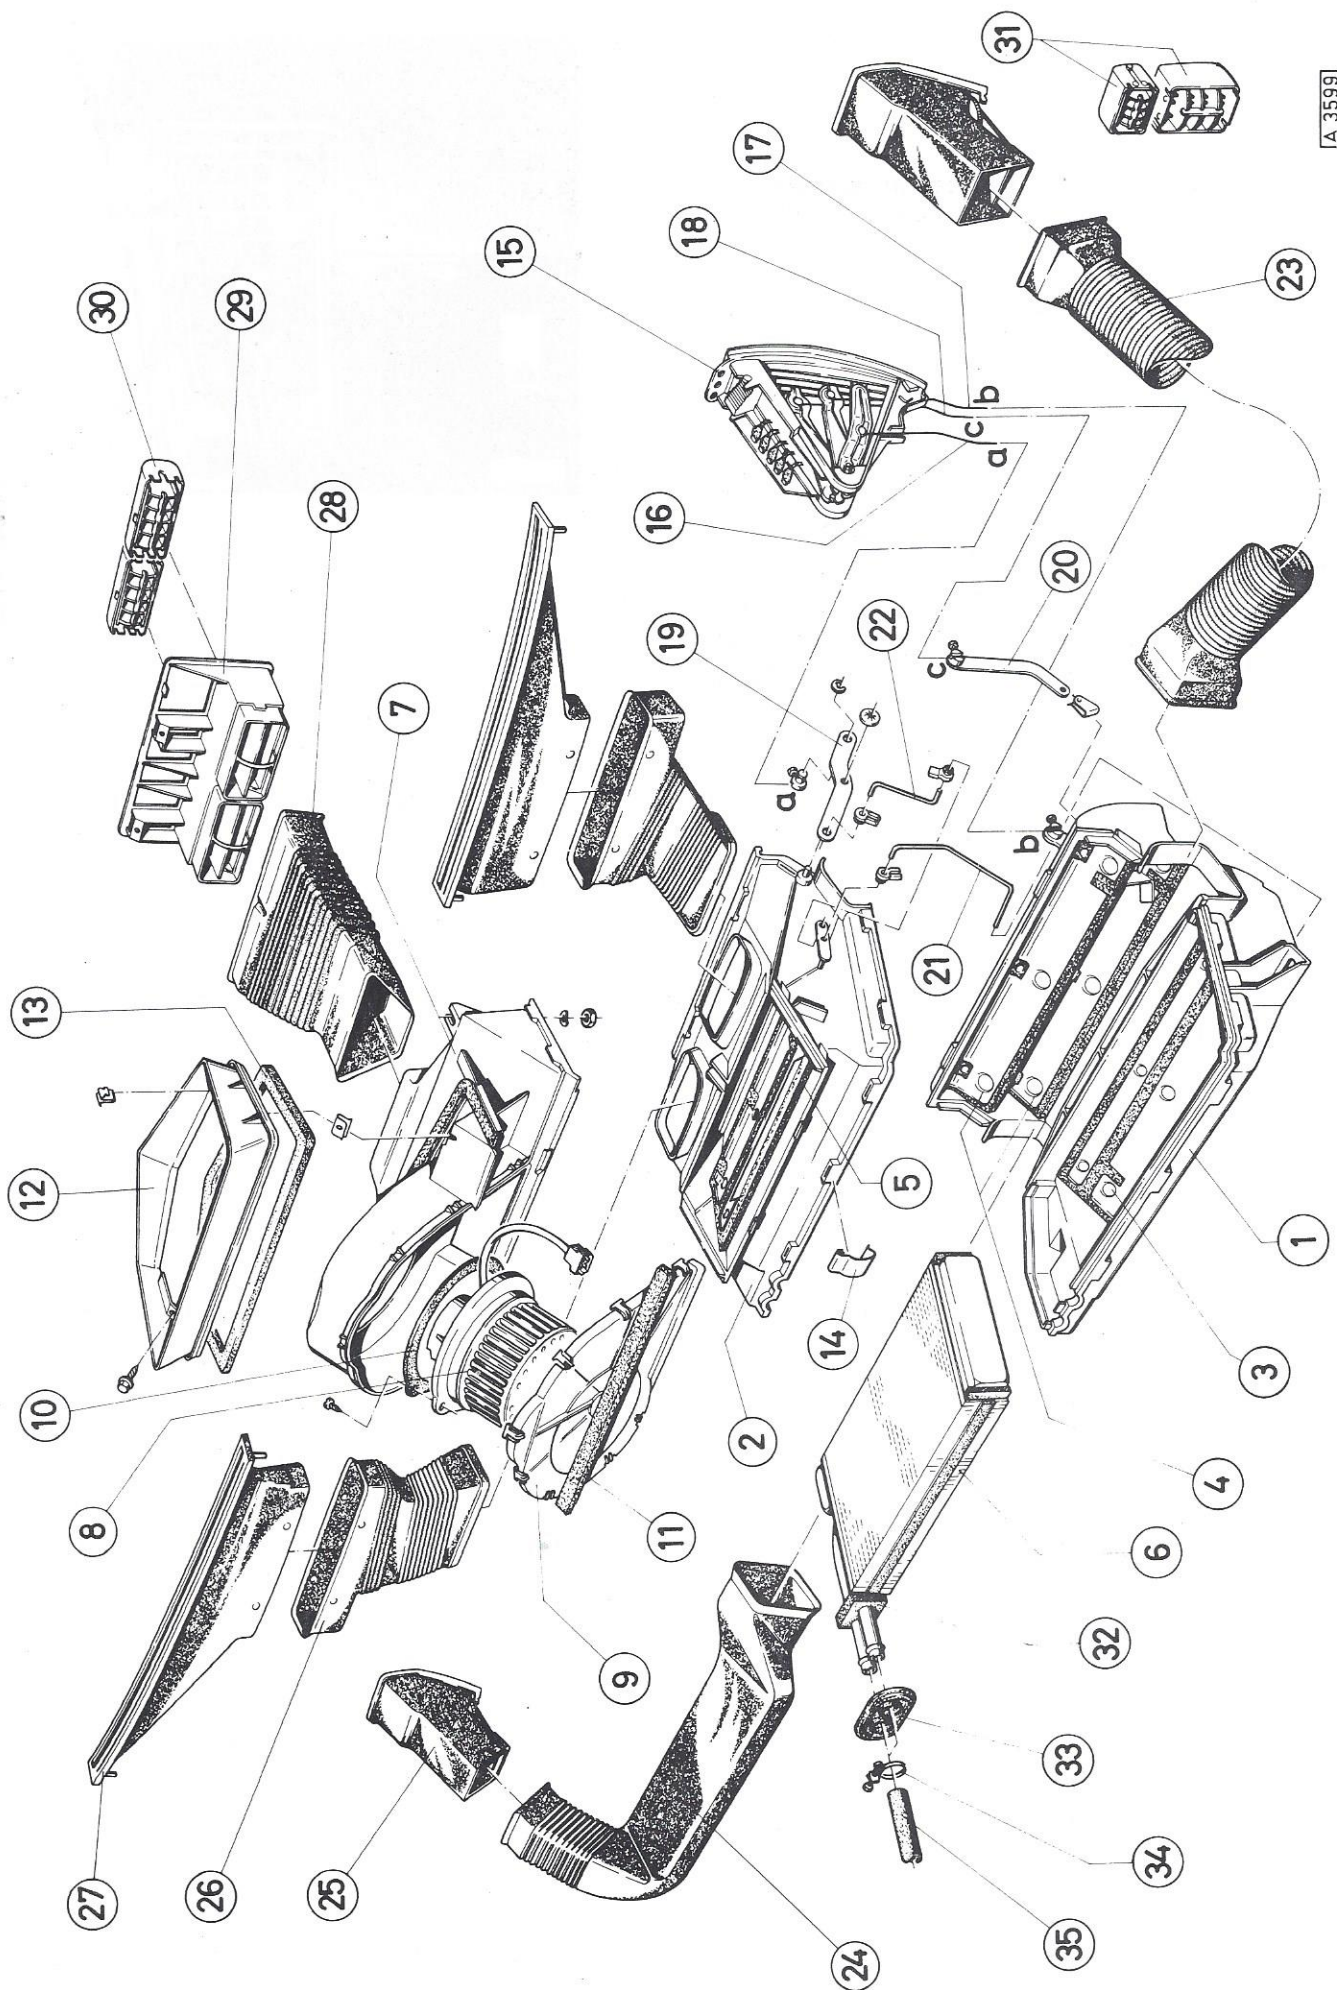


Blower Motor, Replace

REMOVE


Remove water deflectors "A" and "B".

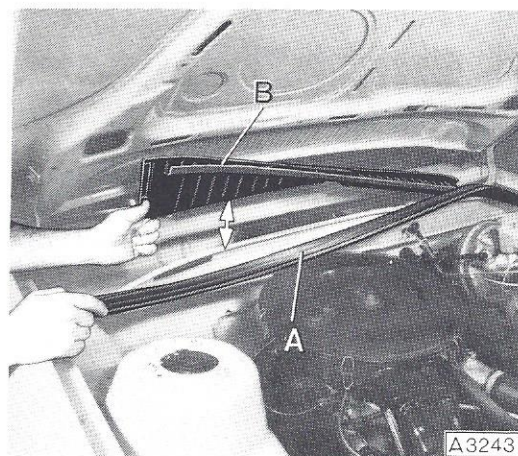


Remove blower motor cover (mounting screws at "D").
Separate plug at "C".

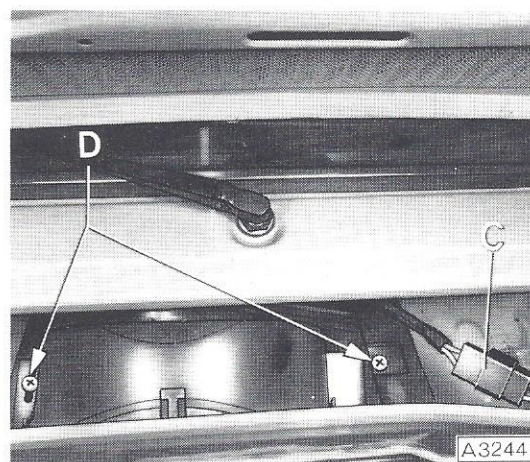


Loosen hose clamps.
Remove heater hoses from heater core.
Plug nipples with sealer caps to keep coolant
from running out.

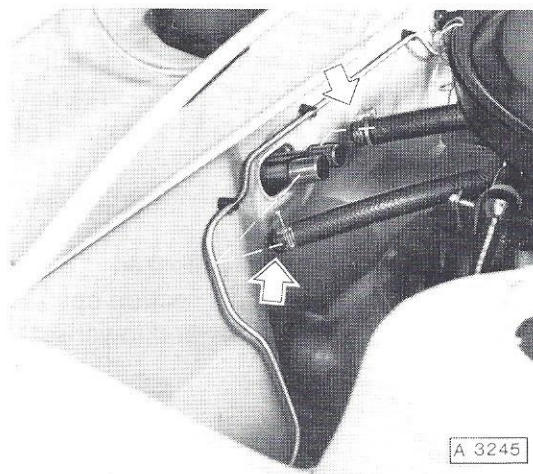


Remove center console (1).
Unclip closure caps.
Unscrew console.

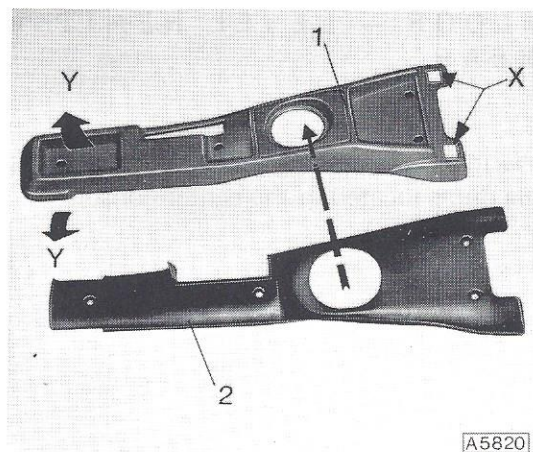

Unscrew facing "E" for air distributor housing.

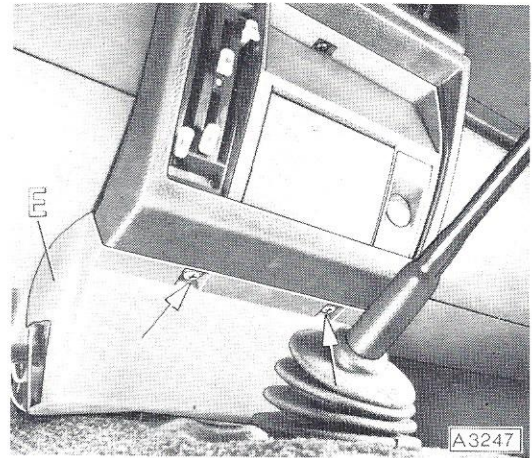

Remove rubber padded cover "G" for radio cut-out.

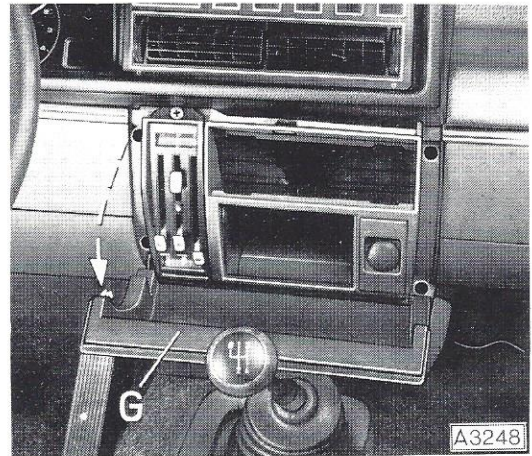


Removing heater control unit.

Remove pull wires 1, 2 and 3 (loosen set screws).

Unscrew heater control panel "H".

Unscrew lower section of dash board at point "X".

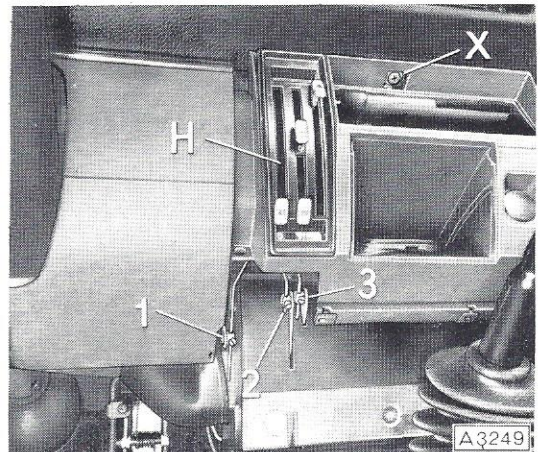

Separate electrical connections from heater control unit "H" from top to bottom in the following order:

- 1 yellow
- 2 brown
- 3 gray
- 4 blue
- 5 black

